



Anziehvorschrift für Zylinderkopf		025.030 passend für / suitable for adaptable à / adaptable a Ford/Mazda	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo

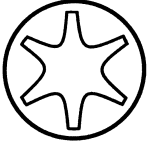

087.830
 M 10x1,5x143

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

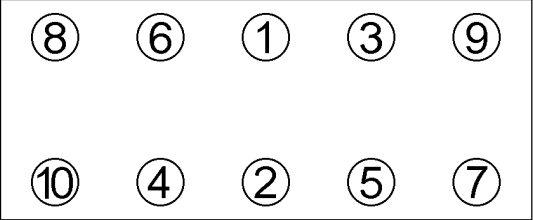

Anziehen/	*	15 Nm
Tightening/		30 Nm
Serrage/	➤	90°
Apriete		

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor
 ⚙ 0,5 mm, Ø 73 mm

 Mot.: DHA, DHB, DHC, DHD, DHE, DHF, DHG
 FUJA, FUJB 1,25 ltr. Zetec 55 KW (75 PS)

 Fiesta, Mazda 121

ElringKlinger AG, Max-Eyth-Str.2
 72581 Dettingen / Erms. Tel. 07123/724 601

025.030