

Anziehvorschrift für Zylinderkopf		076.892 passend für / suitable for adaptable à / adaptable a Opel	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 803.060 M 10 x 153			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤ ➤	25 Nm 90° 90° 90° 45°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
✚ 0,65 mm, Ø 81,7 mm			
Mot.: A18XER, Z18XER, Z16LET/XER, A16LER/XER, Z16LEL, A16LEL, Z16LER, 939 A4.000 1,6 ltr.-1,8 ltr. 103-132 KW (140-192 PS)			
Astra H/J, Corsa D, Insignia, Meriva A Vectra C, Zafira B, Alfa 159, Fiat Croma			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*076.892*	