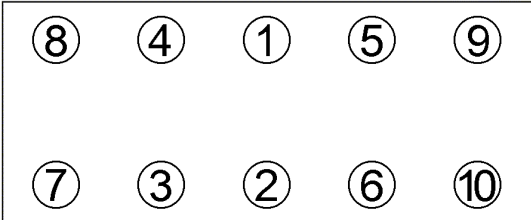


Anziehvorschrift für Zylinderkopf		255.070 passend für / suitable for adaptable à / adaptable a Ford	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 028.230 M 10x1,25x145,5				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	5 Nm 15 Nm 45 Nm 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ ☐ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 89 mm; $\frac{1}{8}$: 0,50 mm				
Mot: AODA; AODB; CJBB; N4JB; GZ; L3C1; LF17; LF18 LFF7 2,0; 2,3 ltr. Duratec; DOHC 16V				
Fiesta; FocusII; MondeoIII/IV; Maverick; C-Max Mazda 3; 5; 6				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*255.070*		