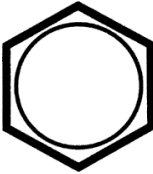
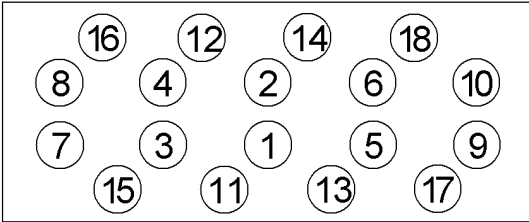


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		265.481 passend für / suitable for adaptable à / adaptable a Ford	 Das Original
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
175.580 M 10x159,5/M8x121			
Anziehen/ Tightening/ Serrage/ Apriete	* * * * * * ➤	Pos. 1-10: 10 Nm Pos. 11-18: 5 Nm Pos. 1-10: 20 Nm Pos. 11-18: 10 Nm Pos. 1-10: 40 Nm Pos. 11-18: 20 Nm Pos. 1-18: 180°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 91 mm; $\frac{1}{2}$: 1,20 mm 3 Zähne/3 Teeth			
Mot: D2FA; D2FB; D2FE; D4FA; DOFA; F4FA FXFA; H9FA 2,4 ltr. Di/TDE 55-101 KW (75-137 PS)			
Transit Diesel Transit Di/TDE FT 330/350/430		ab 1999→ ab 2000→	
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 401		*265.481*	