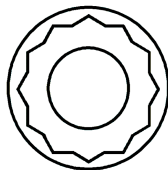
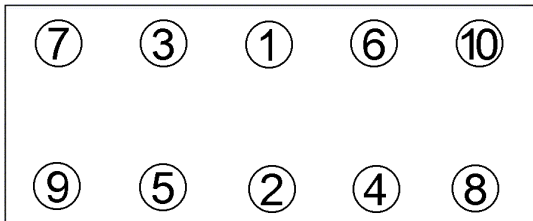


Anziehvorschrift für Zylinderkopf		286.630 passend für / suitable for adaptable à / adaptable a Toyota	 Das Original																													
Tightening Instructions for Cylinder Head																																
Instructions de serrage pour culasse																																
Prescripciones de apriete para culatas																																
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete																														
																																
523.420 M12x180x1,25																																
<table><tr><td>Anziehen/ Tightening/ Serrage/ Apriete</td><td>* 50 Nm ➤ 90° ➤ 90° ➤ 90° ☐ 90° lösen / loosen ☐ 90° lösen / loosen ➤ 90° ➤ 90° ➤ 90°</td></tr></table>				Anziehen/ Tightening/ Serrage/ Apriete	* 50 Nm ➤ 90° ➤ 90° ➤ 90° ☐ 90° lösen / loosen ☐ 90° lösen / loosen ➤ 90° ➤ 90° ➤ 90°																											
Anziehen/ Tightening/ Serrage/ Apriete	* 50 Nm ➤ 90° ➤ 90° ➤ 90° ☐ 90° lösen / loosen ☐ 90° lösen / loosen ➤ 90° ➤ 90° ➤ 90°																															
<table><tr><td colspan="4">Zeichenerklärung / Explanations / Explication / Explicacion</td></tr><tr><td>*</td><td>neue Zylinderkopf- schrauben verwenden</td><td>use new cylinder head bolts</td><td>utiliser des vis neuves</td><td>emplar tornillos nuevos</td></tr><tr><td>★</td><td>Warmlauf (80°C)</td><td>warm up time (80°C)</td><td>chauffage (80°C)</td><td>calentamiento (80°C)</td></tr><tr><td>☐</td><td>Schrauben einzeln lösen und wieder anziehen</td><td>loosen and tighten each bolt</td><td>deserrer et serrer vis par vis</td><td>aflojar y apretar tornillo a tornillo</td></tr><tr><td>●</td><td>Setzzeit</td><td>relaxation time</td><td>durée de tassement</td><td>tiempo de espera</td></tr><tr><td>➤</td><td>Drehwinkel</td><td>torque angle</td><td>angle de serrage</td><td>ángulo de giro</td></tr></table>				Zeichenerklärung / Explanations / Explication / Explicacion				*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Zeichenerklärung / Explanations / Explication / Explicacion																																
*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos																												
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)																												
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo																												
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera																												
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro																												
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 87 mm / $\frac{3}{8}$: 1,00 mm 2,0 / 2,2 Ltr. Mot.: 1AD-FTV, 2AD-FHV, 2AD-FTV 91-130 KW (124-177 PS) Auris, Avensis, Corolla, RAV 4																																
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*286.630*																														