

Anziehvorschrift für Zylinderkopf		302.850 passend für / suitable for adaptable à / adaptable a Nissan	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
⑨ ③ ① ⑥ ⑧ ⑦ ⑤ ② ④ ⑩				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ □ ➤ ➤	40 Nm 60° 360° 40 Nm 75° 75°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 78,6 mm; $\frac{1}{2}$: 0,40 mm				
Mot: HR16DE 1,6 ltr. 69-86 kW (94-117 PS)				
Cube, Juke, Micra III, Note NV200, Qashqai, Tida				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*302.850*	