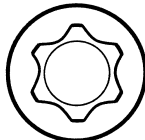
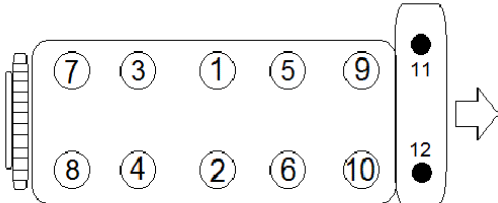


Anziehvorschrift für Zylinderkopf			353.264		 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
			BMW		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 527.450 M 10x1,5x170					
Anziehen/ Tightening/ Serrage/ Apriete	M10 * 30 Nm ➤ 90° ➤ 90° ➤ 45°	M9 * 30 Nm ➤ 90° entfällt ➤ 45°	Pos. 11/12 M9 * 10 Nm ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves		emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)		calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis		aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement		tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage		ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor					
Ø 84,8mm ± 0,5mm Mot. N43/N45N/N46/N46N B16/B20 02/2007➔					
E81/E82/E87/E88 116i, 118i, 120i E90/E91/E92/E93 316i, 318i, 320i E60/61 520i, Li E83 X3 2.0i E84 X1 18i E85 Z4 2.0i					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*353.264*		