

Anziehvorschrift für Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

693.980

passend für / suitable for
adaptable à / adaptable a


Honda



Das Original

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

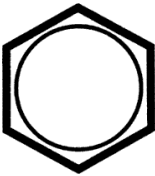

720.090
M9x155x1,25

10

4

2

6

8

7

5

1

3

9





Anziehen/
Tightening/
Serrage/
Apriete

*

➤

15 Nm

29 Nm

130°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø 73,5 mm ± 0,7 mm

Mot: L12B1 66KW
1,2 ltr.

Honda: Jazz III (GE)

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

693.980