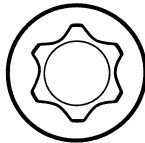
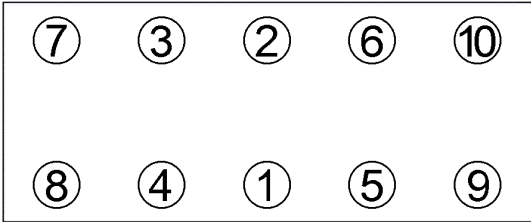


|                                                                                   |                                                                                                                                          |                                                                                                                             |                                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Anziehvorschrift für Zylinderkopf</b>                                          |                                                                                                                                          | <b>862.642</b><br>passend für / suitable for<br>adaptable à / adaptable a<br><br><b>PSA</b>                                 | <br><b>Das Original</b>                                                                                                                                                           |
| <b>Tightening Instructions for Cylinder Head</b>                                  |                                                                                                                                          |                                                                                                                             |                                                                                                                                                                                                                                                                    |
| <b>Instructions de serrage pour culasse</b>                                       |                                                                                                                                          |                                                                                                                             |                                                                                                                                                                                                                                                                    |
| <b>Prescripciones de apriete para culatas</b>                                     |                                                                                                                                          |                                                                                                                             |                                                                                                                                                                                                                                                                    |
| Schraubenkopf / Head shape<br>Tête de vis / Cabeza de tornillo                    |                                                                                                                                          | Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete                                                     |                                                                                                                                                                                                                                                                    |
|  |                                                                                                                                          |                                            |                                                                                                                                                                                                                                                                    |
| 213.270<br>M11x1,5x147                                                            |                                                                                                                                          |                                                                                                                             |                                                                                                                                                                                                                                                                    |
| Anziehen/<br>Tightening/<br>Serrage/<br>Apriete                                   | * 20 Nm<br>40 Nm<br>➤ 230°                                                                                                               |                                                                                                                             |                                                                                                                                                                                                                                                                    |
| Zeichenerklärung / Explanations / Explication / Explicacion                       |                                                                                                                                          |                                                                                                                             |                                                                                                                                                                                                                                                                    |
| *<br>★<br>☐<br>●<br>➤                                                             | neue Zylinderkopf-<br>schrauben verwenden<br>Warmlauf (80°C)<br>Schrauben einzeln lösen<br>und wieder anziehen<br>Setzzeit<br>Drehwinkel | use new cylinder<br>head bolts<br>warm up time (80°C)<br>loosen and tighten<br>each bolt<br>relaxation time<br>torque angle | utiliser des vis<br>neuves<br>chauffage (80°C)<br>deserrer et serrer<br>vis par vis<br>durée de tassement<br>angle de serrage<br>emplar tornillos nuevos<br>calentamiento (80°C)<br>aflojar y apretar<br>tornillo a tornillo<br>tiempo de espera<br>ángulo de giro |
| <b>Motortyp / Engine type / Type de moteur / Tipo de motor</b>                    |                                                                                                                                          |                                                                                                                             |                                                                                                                                                                                                                                                                    |
| ÷ 1,45 mm<br>1,4 Ltr. / 4 Zyl. / 66 kW / 90 PS<br>Motor: DV4TED4<br>C3            |                                                                                                                                          |                                                                                                                             |                                                                                                                                                                                                                                                                    |
| ElringKlinger AG, Max-Eyth-Str.2<br>72581 Dettingen / Erms. Tel. 07123/724 601    |                                                                                                                                          | <b>*862.642*</b>                                                                                                            |                                                                                                                                                                                                                                                                    |