

Anziehvorschrift für Zylinderkopf

Tightening Instructions for Cylinder Head

Instructions de serrage pour culasse

Prescripciones de apriete para culatas

863.130

passend für / suitable for
adaptable à / adaptable a


Iveco



Das Original


Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

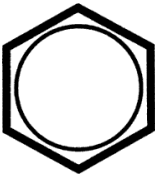

760.300

M 12 x 120/160

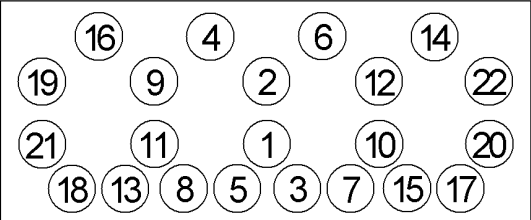

Anziehen/
Tightening/
Serrage/
Apriete

*

☐

➤

➤

30 Nm

60 Nm

60 Nm

90°

90°

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

30.10/35.10/35.12/40.10/A40.12/45.10/A45.12/
49.10/49.12/59.12 Turbo Daily
ab 05/1996>

Master 2,8 DTI
ab 08/1998>

Mot. 8140.23/43
2798 ccm

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

863.130