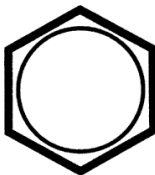
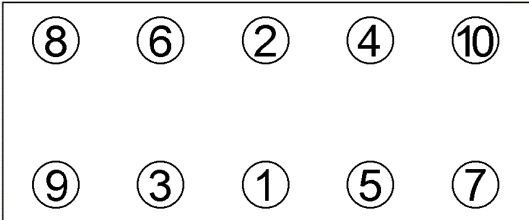


Anziehvorschrift für Zylinderkopf			864.100		 Das Original	
Tightening Instructions for Cylinder Head			passend für / suitable for			
Instructions de serrage pour culasse			adaptable à / adaptable a			
Prescripciones de apriete para culatas			Honda			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
						
706.150 M 12 x 163/199						
Anziehen/ Tightening/ Serrage/ Apriete	*	Mot. F18A../F20A.. Mot. F22A.. 40 Nm 70 Nm 108 Nm	*	Mot. F20Z... 40 Nm 70 Nm 100 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion						
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos		
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)		
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo		
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera		
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor						
Ø: 85,9 mm; ½: 1,20 mm						
Mot: F18A2, F18A3, F20A2, F20A4, F20A6, F20A7 F20A8, F20Z1, F20Z2, F20Z3, F22A3, F22A7 F22A8, F 18 A3, F 20 Z1, F 20 Z2						
1,8 ltr-2,2 ltr Accord IV-VI, Prelude IV-V, Rover 600						
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*864.100*			