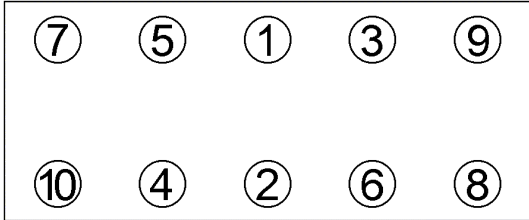


Anziehvorschrift für Zylinderkopf		919.942 passend für / suitable for adaptable à / adaptable a Ford	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 802.940 7/16 - 135				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 - 30 Nm ● 76 - 92 Nm ● 3 min ► 90°			
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ►	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 83,8; $\frac{1}{2}$: 1,36 mm 2 Zähne/teeth/dents				
Mot. RFA; RFB; RFD; RFK; RFL; RTA; RTB; RTC; RTD RTE; RTF; RTG; RTH 1,8 ltr. 43-66 KW (58-90 PS)				
Fiesta, Escort, Orion, Sierra →1992				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*919.942*	