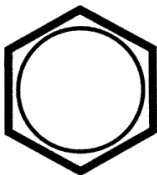
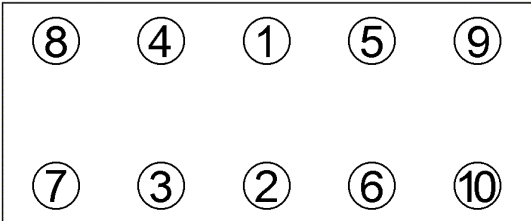


Anziehvorschrift für Zylinderkopf		984.704 passend für / suitable for adaptable à / adaptable a PSA	 Das Original																									
Tightening Instructions for Cylinder Head																												
Instructions de serrage pour culasse																												
Prescripciones de apriete para culatas																												
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete																										
																												
022.540 M 12x1,5x255																												
<table><tr><td>Anziehen/ Tightening/ Serrage/ Apriete</td><td>* ➤ ● ➤</td><td>20 Nm 105° 3 min 105°</td></tr></table>				Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ● ➤	20 Nm 105° 3 min 105°																						
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ● ➤	20 Nm 105° 3 min 105°																										
Zeichenerklärung / Explanations / Explication / Explicacion																												
<table><tr><td>✱</td><td>neue Zylinderkopf-schrauben verwenden</td><td>use new cylinder head bolts</td><td>utiliser des vis neuves</td><td>emplar tornillos nuevos</td></tr><tr><td>★</td><td>Warmlauf (80°C)</td><td>warm up time (80°C)</td><td>chauffage (80°C)</td><td>calentamiento (80°C)</td></tr><tr><td>☐</td><td>Schrauben einzeln lösen und wieder anziehen</td><td>loosen and tighten each bolt</td><td>deserrer et serrer vis par vis</td><td>aflojar y apretar tornillo a tornillo</td></tr><tr><td>●</td><td>Setzzeit</td><td>relaxation time</td><td>durée de tassement</td><td>tiempo de espera</td></tr><tr><td>➤</td><td>Drehwinkel</td><td>torque angle</td><td>angle de serrage</td><td>ángulo de giro</td></tr></table>				✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos																								
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)																								
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo																								
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera																								
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro																								
Motortyp / Engine type / Type de moteur / Tipo de motor																												
88,5 mm Ø, 1,27 mm ✱																												
Mot. Z EJ, Z ES, Z DJ, Z DS 1995/2165 ccm																												
Mot. J5R, J6R, J7R, J7T																												
505 ab 5/1979➔ R 25 ab 3/1984➔																												
R 18 ab 1984➔ Espace ab 5/1984➔																												
Fuego 1984➔1985 Master																												
R 21 ab 7/1986➔ Trafic																												
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*984.704*																										