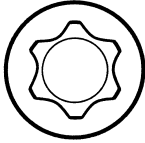
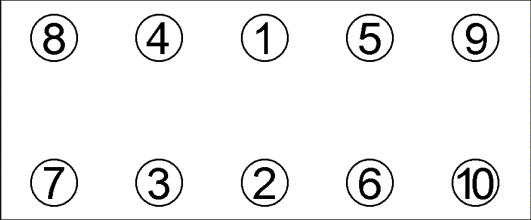


Anziehvorschrift für Zylinderkopf		012.361 passend für / suitable for adaptable à / adaptable a Renault / Nissan	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 759.350 M 9x1,25x103				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm ➤ 90°±6° ● 3 min Pos. 1/2: ☐ 20 Nm ➤ 200°±6°	Pos. 3/4/5/6: ☐ 20 Nm ➤ 200°±6° Pos. 7/8/9/10: ☐ 20 Nm ➤ 200°±6°		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ➤	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor ⚙ 1,27 mm, Ø 70 mm Mot.: D7D 700/740, D7F 700-704/706/710/720/ 722/726/730/744/746/764/766 Clio, Kangoo, Twingo Kubistar				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*012.361*		