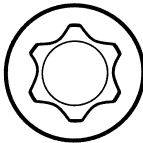
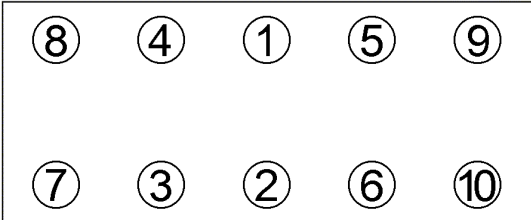


Anziehvorschrift für Zylinderkopf		100.400 passend für / suitable for adaptable à / adaptable a Ford	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 330.390 M 11x1,5x147				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm 40 Nm ➤ 180°	Peugeot: * 20 Nm 40 Nm ➤ 130° ➤ 130°		
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø 75 mm; $\frac{1}{2}$: 1,25 mm 2 Kerben Mot: 8HX; 8HZ; DV4D; F6JA; F6JB 1,4 ltr. TDCi/DV4TD 40-50 KW (54-68 PS) Fiesta/Fusion → 11/2001; 206/307 → 2001 C3, Xsara				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*100.400*	