


Anziehvorschrift für Zylinderkopf		130.742	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Citroën, Peugeot	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	

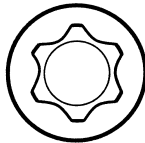

152.550
M 12x1,5x123

⑧	④	①	⑤	⑨
⑦	③	②	⑥	⑩

Anziehen/ Tightening/ Serrage/ Apriete	✱ ➤ ➤	20 Nm 60 Nm 90° 90°
---	-----------------	------------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

✚ 1,62 mm, Ø 84 mm, 4 Löcher/holes/trous/agujeros

Mot.: DW8, DW8B, 1WZ, WJY, WJZ
1,9 Ltr. Diesel 44-51 KW

Berlingo, C15, Jumpy, Xsara, 206, 207, 306,
Expert, Partner
Fiat Scudo, Toyota Corolla

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*130.742*
--	------------------