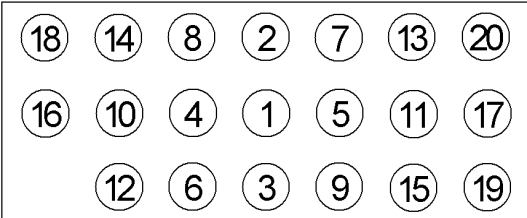


Anziehvorschrift für Zylinderkopf		151.134 passend für / suitable for adaptable à / adaptable a VW/AUDI	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo  713.490 M 9x1,5x111/141	Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 
---	--

Anziehen/ Tightening/ Serrage/ Apriete	* ➤	15 Nm 30 Nm 180°
---	--------	------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) desserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
-----------------------	--	---	--	---

Motortyp / Engine type / Type de moteur / Tipo de motor

3,2 Ltr. 6 Zyl. FSI
 206 kW (280 PS)

Mot. AXZ

Passat

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*151.134*
--	------------------