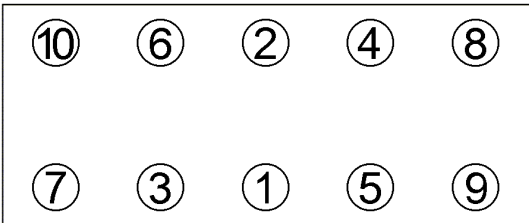


Anziehvorschrift für Zylinderkopf		217.021 passend für / suitable for adaptable à / adaptable a Fiat/Lancia/Alfa Romeo/Opel	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
152.440 M12x1,25x218				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm 65 Nm ➤ 90° ➤ 90°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✚ 0,92 mm, Ø 83 mm Brava, Bravo, Nuova Punto, Stilo, Multipla, Sedici,Marea, Doblo, Musa, Palio, Lybra Alfa 147, 156 Signum, Astra, Vectra, Zafira, Saab 9-3 1,9 ltr. JTD/CTDI/TiD Turbo-Diesel Euro 3				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*217.021*	