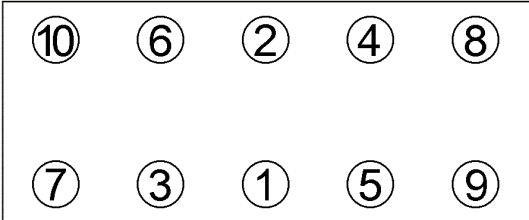


Anziehvorschrift für Zylinderkopf		217.031		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse		Fiat/Lancia/Alfa Romeo/Opel			
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
152.440 M12x1,25x218					
Anziehen/ Tightening/ Serrage/ Apriete		* ➤ ➤ ➤	20 Nm 65 Nm 90° 90° 90°		
Zeichenerklärung / Explanations / Explication / Explicacion					
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
✚ 1,02 mm, Ø 83 mm Brava, Bravo, Nuova Punto, Stilo, Multipla, Sedici, Marea, Doblo, Musa, Palio, Lybra Alfa 147, 156 Signum, Astra, Vectra, Zafira, Saab 9-3 1,9 ltr. JTD/CTDI/TiD Turbo-Diesel Euro 3					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*217.031*		