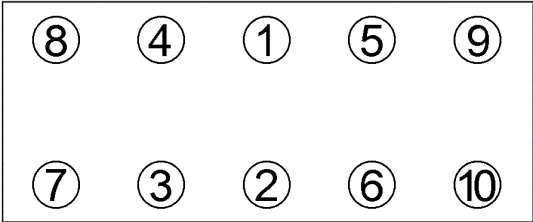


Anziehvorschrift für Zylinderkopf		219.612	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 759.370 M 10x1,5x99/113				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm ► 100° ● 3 min Pos. 1,2: ☐ 20 Nm + 110° Pos. 3-6: ☐ 20 Nm + 110°	Pos. 7-10: ☐ 20 Nm + 110		
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
►	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 80 mm; $\frac{1}{2}$: 1,27 mm				
Mot: K7M 702,703,704,710,720,744,745,746 K7J 700,701				
1,6 Ltr. 55 - 66 KW				
Clio,Kangoo,Megane				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*219.612*	