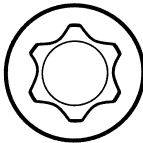


Anziehvorschrift für Zylinderkopf			262.871	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			passend für / suitable for adaptable à / adaptable a Renault Das Original	
			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
373.280 M 11x1,5x126 E14				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤	Clio, Megane, Scenic 25 Nm 25 Nm 270° +/-10°	* ➤	Kangoo 25 Nm 25 Nm 225° +/-10°
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 77,5 mm; ⌀: 0,6 mm				
Mot: K9K 700, 704, 710, 712, 722, 728, 729, 790 1,5 ltr dCi 48-60 kW (65-82 PS)				
Clio, Megane, Kangoo, Grand Scenic				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*262.871*	