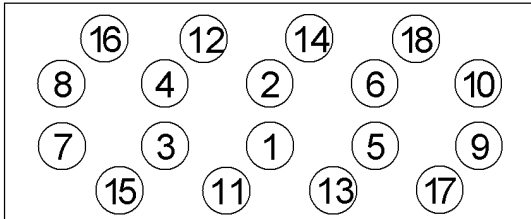


Anziehvorschrift für Zylinderkopf		265.391 passend für / suitable for adaptable à / adaptable a Ford	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
175.580 M 10x159,5/M8x121				
Anziehen/ Tightening/ Serrage/ Apriete		Pos. 1-10: 10 Nm Pos. 11-18: 5 Nm Pos. 1-10: 20 Nm Pos. 11-18: 10 Nm Pos. 1-10: 40 Nm Pos. 11-18: 20 Nm ➤ Pos. 1-18: 180°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 87,1 mm; $\frac{5}{8}$: 1,20 mm 3 Zähne/teeth/dents				
Mot: ABFA; D3FA; D5BA; F3FA; F1FAFMBA; HJBA HJBB; HJBC; N7BA; QJBA; QJBC; QJBD; SDBA 2,0 ltr.Duratorq 55-96 KW (75-130 PS)				
Mondeo (TDdi) 10/00➔; Mondeo (TDCi) 10/01➔ Transit (Di) 08/00➔; Transit (TDCi) 05/02➔				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*265.391*	