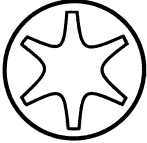
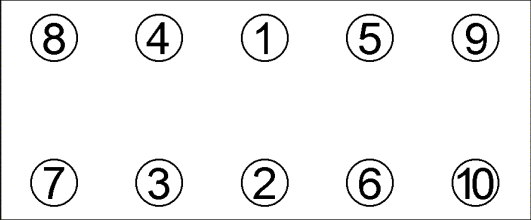


Anziehvorschrift für Zylinderkopf		351.343		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
		Opel		
		Das Original		
		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
820.297 M 11 x 154				
Anziehen/ Tightening/ Serrage/ Apriete	16 D * 25 Nm ➤ 90° ➤ 90° ➤ 45° ★ 15 min ➤ 30° 1.000 km ➤ 45°	16 DA * 25 Nm ➤ 60° ➤ 60° ➤ 60° ★ 15 min ➤ 30° 1.000 km ➤ 45°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
81,5 mm Ø, -/1,50 mm ÷				
1,6 ltr. Diesel				
Mot 16D,16DA, 40/44 kW (54/60 PS)				
Ascona-C, 04/1982>, Kadett-D				
Kadett-E, 09/1984>				
Astra Diesel, 1982>1989				
Belmont Diesel, 01/1986>1989				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*351.343*		