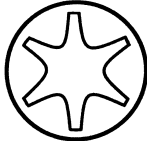


Anziehvorschrift für Zylinderkopf		451.323	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Porsche	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
872.290 M 12x1,5x140			
Anziehen/ Tightening/ Serrage/ Apriete	* 10 Nm 50 Nm ☐ lösen / loosen 4 Nm 12 Nm ➤ 1-4: 65° ➤ 5-8: 60° ➤ 1-4: 65° ➤ 5-8: 60°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
3,8l Boxer 6-Cyl. Ø=104,2mm $\frac{1}{2}$ =0,6mm Cyl. 1-3 276-316 KW / 375-430 PS MA1.01, MA1.03, MAB.03, MDB.XA			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*451.323*	