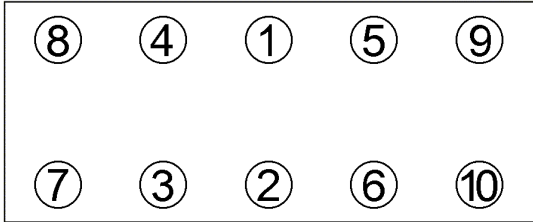


Anziehvorschrift für Zylinderkopf			456.710 passend für / suitable for adaptable à / adaptable a Renault	 Das Original
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
373.281 M 11x1,5x126 E18				
Anziehen/ Tightening/ Serrage/ Apriete		* 25 Nm 25 Nm ➤ 270° ±10°	* 25 Nm 25 Nm ➤ 225° ±10°	
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Wärmelauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 77,5 mm; $\frac{1}{2}$: 0,9 mm				
Mot: K9K 714, 718, 740, 766, 768, 800 1,5 ltr. dCi 47-63 kW (64-86 PS)				
Clio, Twingo, Modus, Kangoo				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*456.710*	