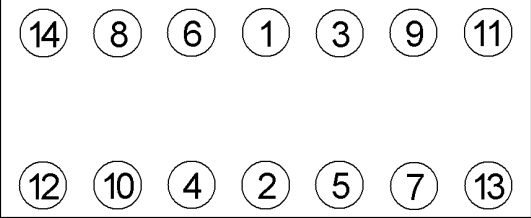


Anziehvorschrift für Zylinderkopf		713.173	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a	
		BMW	
233.380 M 12x1,5x200		Das Original	
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
			
Anziehen/ Tightening/ Serrage/ Apriete	* □ ► ►	70 Nm 180° 50 Nm 120° 120°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ►	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor			
Mot. N57N/Z D30 1,55mm F30 330d F07/F10/F11 530d,dX, 535d,dX F06/F12/F13 640d,dX F01/F02 730d,dX, 740d,dX/ 730Ld F25 X3 30dX, 35dX 2 Löcher, Holes, Trous, Agujeros, Fori			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*713.173*	