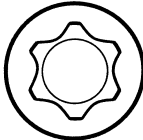
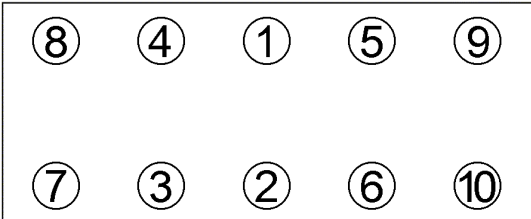


Anziehvorschrift für Zylinderkopf		716.110			
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a			
Instructions de serrage pour culasse		Renault/Opel/Volvo/Nissan			
Prescripciones de apriete para culatas		Das Original			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
272.010 M12x1,5x121					
Anziehen/ * 30 Nm Tightening/ ➤ 230° Serrage/ Apriete					
Zeichenerklärung / Explanations / Explication / Explicacion					
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
Ø: 81 mm; $\frac{1}{4}$: 1,60 mm					
Mot: F9Q 664, 670, 674, 680, 710, 716-718, 731-733, 736, 738, 740, 744, 750, 754, 756, 758-760, 762, 770, 772, 774, 780, 782, 790, 800, 803, 804, 808, 812, 816					
Kangoo, Laguna, Master, Megane, Scenic, Movano					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*716.110*		