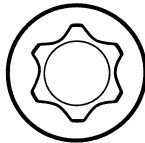
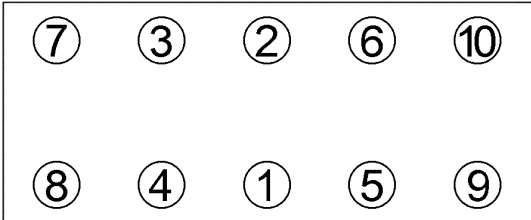


Anziehvorschrift für Zylinderkopf		718.321	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Peugeot		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
330.390 M 11x1,5x147				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm 40 Nm ➤ 130° ➤ 130°			
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 76,3 mm; $\frac{1}{2}$: 1,30 mm				
Mot: DV6BTED, DV6CTED, DV6DTED, DV6C 9HD, 9HF, 9HL, 9HP, 9HR 1.6 ltr. HDi, 66-85 kW (90-116 PS)				
Peugeot 2008, 3008, 5008, Partner Peugeot 207, 208, 301, 308, 508				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*718.321*	