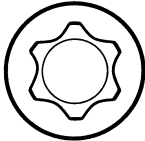
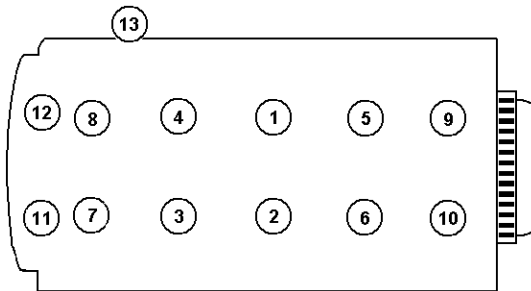


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		729.050 passend für / suitable for adaptable à / adaptable a Peugeot	 Das Original
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 426.830 M8x1,25x35			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤ ➤ ➤ ➤	Mot EP3 / Pos 1-10 30 Nm 90° 90° Pos. 11-12: 25 Nm 90° 90° Pos. 13: 30 Nm	* ➤ ➤ ➤ ➤ ➤ ➤
		Mot EP6 / Pos 1-10 30 Nm 90° 90° Pos. 11-12: 30 Nm 90° 90° Pos. 13: 9 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 78 mm; $\frac{1}{2}$: 0,90 mm PSA Mot. EP3, EP6 / Mini Mot. N12 B14/B16 1,4-1,6 ltr., 55-90 kW (75-122 PS) PSA 207, 207 CC, 308, 3008, 5008, C4 Mini R55/R56/R57/R58/R60 Cooper, One 1.4i			
ElingKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 401 *729.050*			