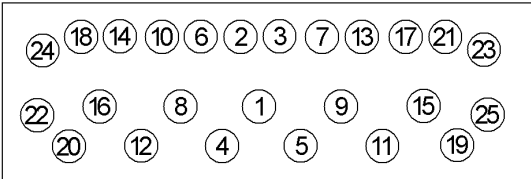


Anziehvorschrift für Zylinderkopf		760.678		
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
		Mercedes-Benz	Das Original	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A  B 				
820.075 M 12 x 111				
Anziehen/ Tightening/ Serrage/ Apriete	A OM 322/352/362 OM 366, A, LA > Mot. 071683 * 60 Nm 90 Nm ★ 80°C 110 Nm 500 km □ 110 Nm	B OM 366, A, LA Mot. 071684 > * 60 Nm 90 Nm 120 Nm ► 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
★	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
►	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
OM 322 M.B. 322.910>919/970/971 079240 OM 352 M.B. 352 M.B. 353 OM 366 OM 366 A				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*760.678*	