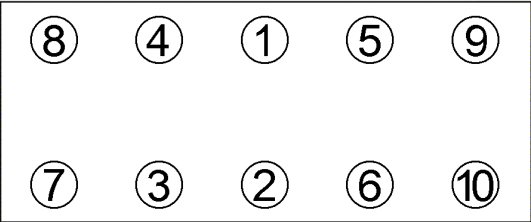


Anziehvorschrift für Zylinderkopf		987.043		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
		Renault		
759.370 M 10 x 95/113		Das Original		
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
Anziehen/ Tightening/ Serrage/ Apriete	✱ 20 Nm ➤ 100° ± 6° ● 3 min ☐ Pos. 1 und 2: 20 Nm + 100°±6° ☐ Pos. 3-6: 20 Nm + 100°±6°	Pos. 7-10: ☐ 20 Nm + 100°±6°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 77 mm, ✱: 1,43 mm				
Mot: E5F 710,716, E6J 700,701,706,712, 713,718,760, E7F 700,706, E7J 624 626,634,635,706,718,719,720,724, 726,728,742,745,754,780				
R19,Clio,Kangoo,Megane,Rapid				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*987.043*	