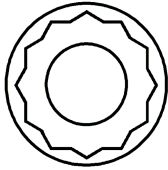


Anziehvorschrift für Zylinderkopf		020.030 passend für / suitable for adaptable à / adaptable a Mitsubishi	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo
 

709.270
M 10 x 95

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

7	5	2	4	10
9	3	1	6	8

Anziehen/	✱	75 Nm
Tightening/	☐	20 Nm
Serrage/	➤	90°
Apriete	➤	90°

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

 ✱ 0,45 mm, Ø 82 mm

 Mot.: 4G92, 4G93 1,6 ltr.-1,8 ltr.
 66-103 kW (90-140 PS)

 Carisma, Colt, Lancer

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*020.030*
--	------------------