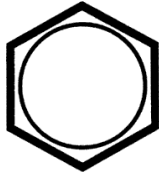
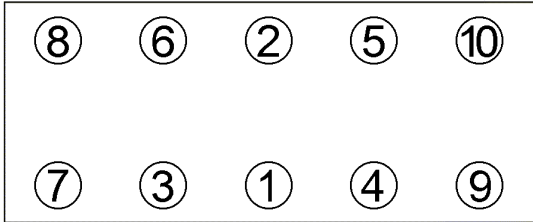


Anziehvorschrift für Zylinderkopf			144.150		 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for		
Instructions de serrage pour culasse			adaptable à / adaptable a		
Prescripciones de apriete para culatas			Fiat		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
					
760.870 M 10 x 85/103					
Anziehen/ Tightening/ Serrage/ Apriete			* 20 Nm 40 Nm ➤ 90° ➤ 90°		
			M 8: 30 Nm		
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
✱ 1,74/1,65 mm, Ø 87 mm					
Mot.: 159 A3.000, 160 E1.011, 220 A2.000 1,6 Ltr.					
Palio, Punto, Scudo, Tempra, Tipo, Uno Lancia Dedra, Delta Peugeot Expert, Citroën Jumpy					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*144.150*		