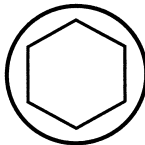
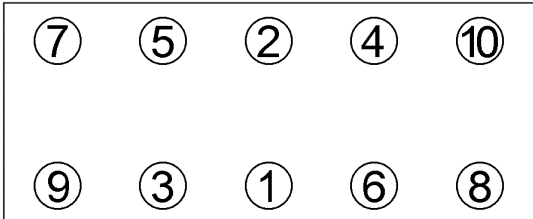


Anziehvorschrift für Zylinderkopf		560.015	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a	
Instructions de serrage pour culasse		Mitsubishi	
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
709.170 M 10 x 100			
Anziehen/ Tightening/ Serrage/ Apriete	* ★	30 - 35 Nm 50 - 55 Nm 70 - 75 Nm 15 min 80 - 85 Nm	
Zeichenerklärung / Explanations / Explication / Explicacion			
★	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C) calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 82 mm			
Mot: 4G37, G37B 1,8 ltr.			
Cordia, Galant IV, Lancer III-IV, Space Wagon, Tredia			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*560.015*	