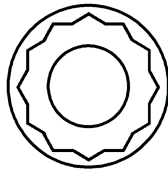


Anziehvorschrift für Zylinderkopf		920.487		
Tightening Instructions for Cylinder Head		passend für / suitable for		
Instructions de serrage pour culasse		adaptable à / adaptable a		
Prescripciones de apriete para culatas		Mitsubishi / Hyundai		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		Das Original
		⑦⑤②④⑩ ⑨③①⑥⑧		
709.240 M 11x1,25x115				
Anziehen/ Tightening/ Serrage/ Apriete	M 12 35 Nm 65 Nm 100 Nm ★ 15 min 110 Nm	M 11 ★ 20 Nm ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
★	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 86,5 mm				
Mot: 4G63, G4CP-D 2,0 ltr. 96-110 kW (130-150 PS)				
Eclipse, Galant IV, Sonata I				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*920.487*	